


SC/PC

2301 Quick termination connector

OPERATION INSTRUCTION

Thank you for buying and using this product. In order to use it correctly, please study this instruction carefully.


- 1、 The product applies for 3.1*2.0 mm drop Cable, and $\text{Ø}3.0/\text{Ø}2.0\text{mm}$ Indoor fiber optic cable
- 2、 Guarantee the construction environment within the allowable range
- 3、 If you do not follow the INSTRUCTION provided below and have problems for installation, you should bear all responsibility by yourself.
- 4、 All the instrument in the INSTRUCTION are not included in the product, please prepare them separately.
- 5、 Insertion loss of $< 0.3\text{dB}$ (0.2dB typical);
Return loss $> 50\text{dB}$;
Repeat on (> 5)



cut scale: 1:1



1、 Tools

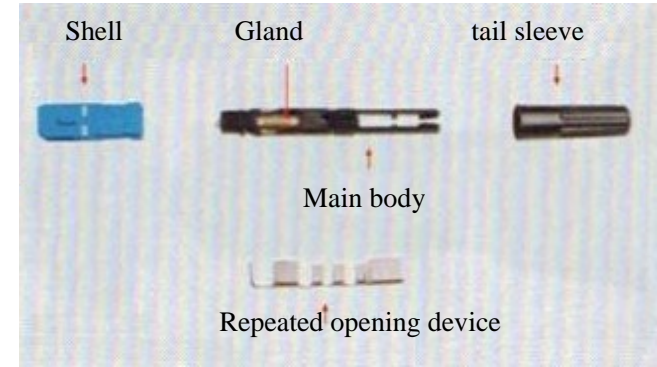


2、 Quick connector preparation




3、 Put the tail sleeve into the cable sheath




4、 Cut the cable to 10mm

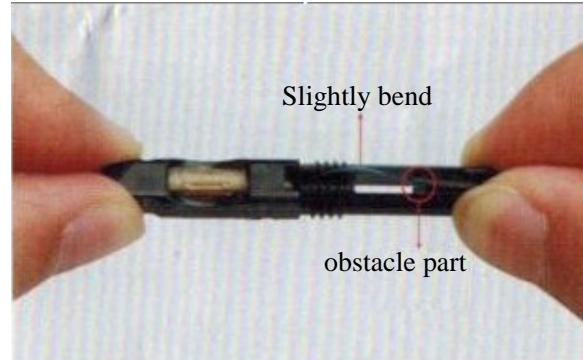


5、 Put the cable from the end of main body into the obstacle part, and make the cable bend slightly.

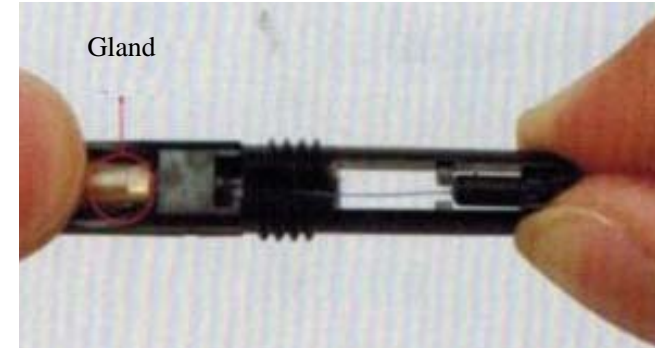

6、 Hold the cable and the main body, keep it bending; Push the gland down to clamp the bare fiber closely.

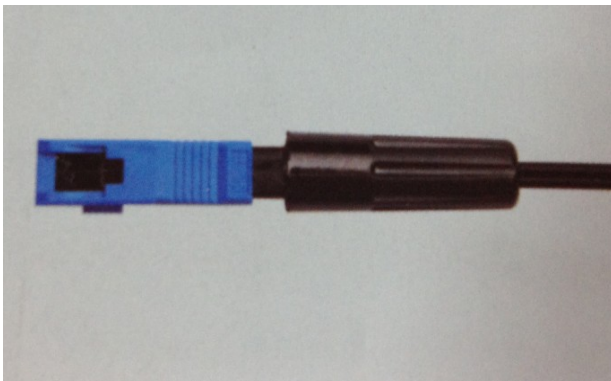

7、 Screw on the tail sleeve and put on the shell.

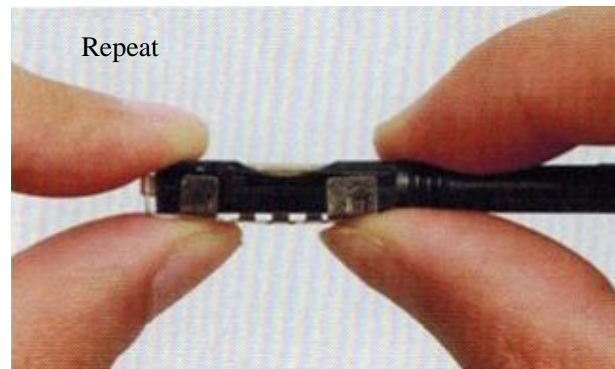

8、 Take off the shell ,use the repeated opening device, and jack up the gland .



9、 Screw off the tail sleeve, and take off the cable.